 


## Installation directions:



 
1. Screw the head and long side boards by two iron plates. Also the long side board and the wide board. (Every corner has two iron plates. Keep the mouth upward.)
2. Screw four castors on the lower iron plate.
3. Put the rib-like shelf on the upper iron plate.
4. Put the side board-cloth from the tail to the head.
5. Please screw every parts tight.

## Fittings List:



- |                                 |   |              |
|---------------------------------|---|--------------|
| 1. Castor:                      | 5x12  | 4            |
| 2. Screw:                       | 8x25  | 34+2(backup) |
| 3. Iron plate:                  |   | 8            |
| 4. 27cm-right angle iron plate: | 1 (only 1.6M-wide or more wider bed contains it.) |              |
| 5. Rib-like shelf:              |   | 1            |




## Installation instructions of pneumatic bed:

- (1) Firstly, assemble the bedstead in accordance with the "Installation procedure of common bed". Notice that the upper layer of the bed head uses four-hole rectangle corner brace, the under layer uses triangle corner brace. Both of the upper layer and the under layer of the bed end use the triangle corner braces. The openings of all the triangle corner brace are upwards.
- (2) The four bed feet are installed within the corner braces of the under layer, fixed with screws.
- (3) The pneumatic rack of pneumatic settings is installed in the corresponding positions along the side plate of the bed, left and right each, which is very important (Notice: distinguish the directions).
- (4) fixed the skeleton frame on the pneumatic rack with screws.
- (5) The hanging rings are installed in the screw holes at the end of the skeleton frame, one for the bed 1.5 meters wide, two for the bed 1.8 meters wide.
- (6) Two  model cross arms are installed in the front and the back guard boards, left and right each. The  model cross arm is installed on the base plate, facing the left and right side plates of the bed head and in the middle of the bed box.
- (7) The base plates are installed on the  model cross arms, totally two pieces.
- (8) The end of pneumatic bed 1.8 meters wide--the screw hole of the wide side is installed with 27 cm long L-shape iron.

## List of the accessories of pneumatic bed:


- Bed feet: 5x6 4  
 Screws: 8x25 54+2 (standby)  
 6x45 9+1 (standby)
- Big corner braces: 6  
 Small pneumatic corner braces: 2  
 Risers: 2  
 Skeleton frame: 1  
 Main iron: 1 (only for bed set 1.6 meters wide use)  
 cross arm: 1  
 straight cross arms: 2  
 Black base plate: 2

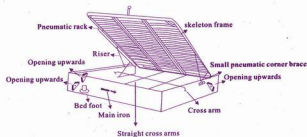

(3)Graph

## Descriptions of pneumatic settings:

- ① Rack in Graph (1) shall be installed on the right side of the bedplate, facing the bed head.
- ② Rack A should be installed on the side plate (Notice the directions, please).
- ③ Rack B should be installed along the side of the hob of the skeleton frame (see Graph(2)).
- ④ Rack C and Rack E are movable.
- ⑤ Rack D is the pneumatic setting (riser), the thick end of which is installed on rack B and the thin end of which is on rack C.
- ⑥ Screw hole "a" needs to be fixed with the screw (very important).
- ⑦ Screw holes of 1, 2, 3 and 4 need to be fixed (see more in item ③), which is very important.
- ⑧ Screw holes of 5, 6, 7 and 8 need to be fixed (see more in item ②), which is very important.

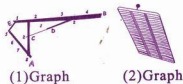

(1)Graph

(2)Graph

Please install correctly in accordance with this method so as not to damage the articles. Thanks!