

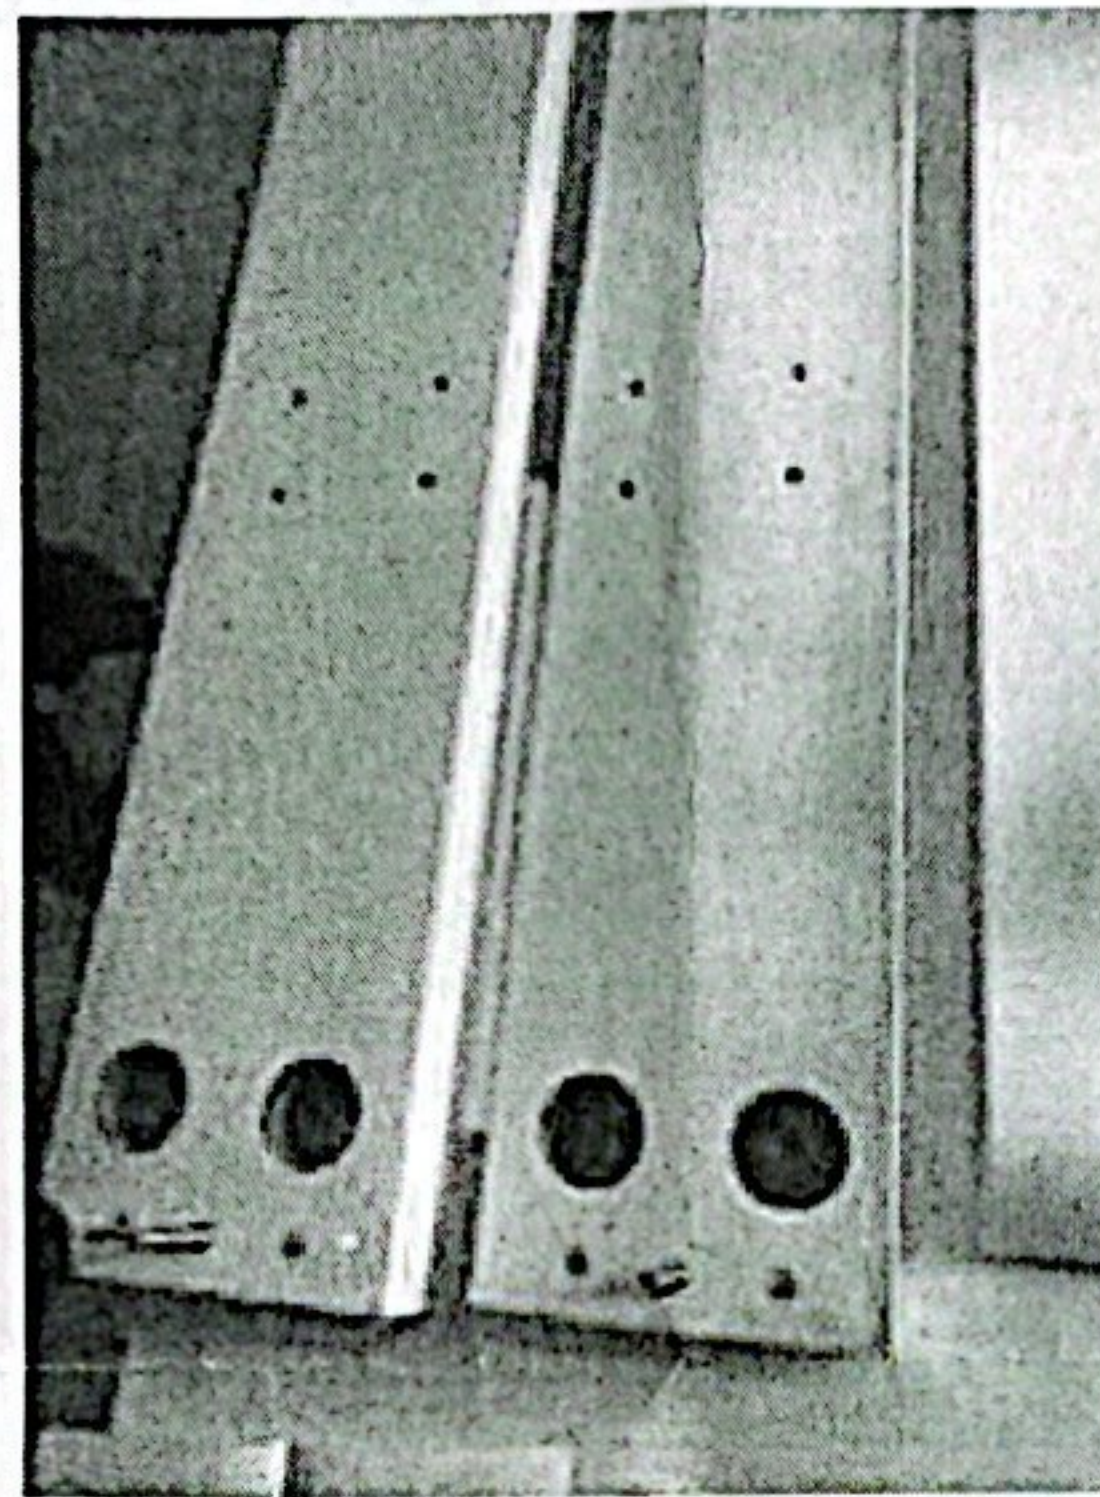


CONTENTS OF THE BEDFRAME BOX


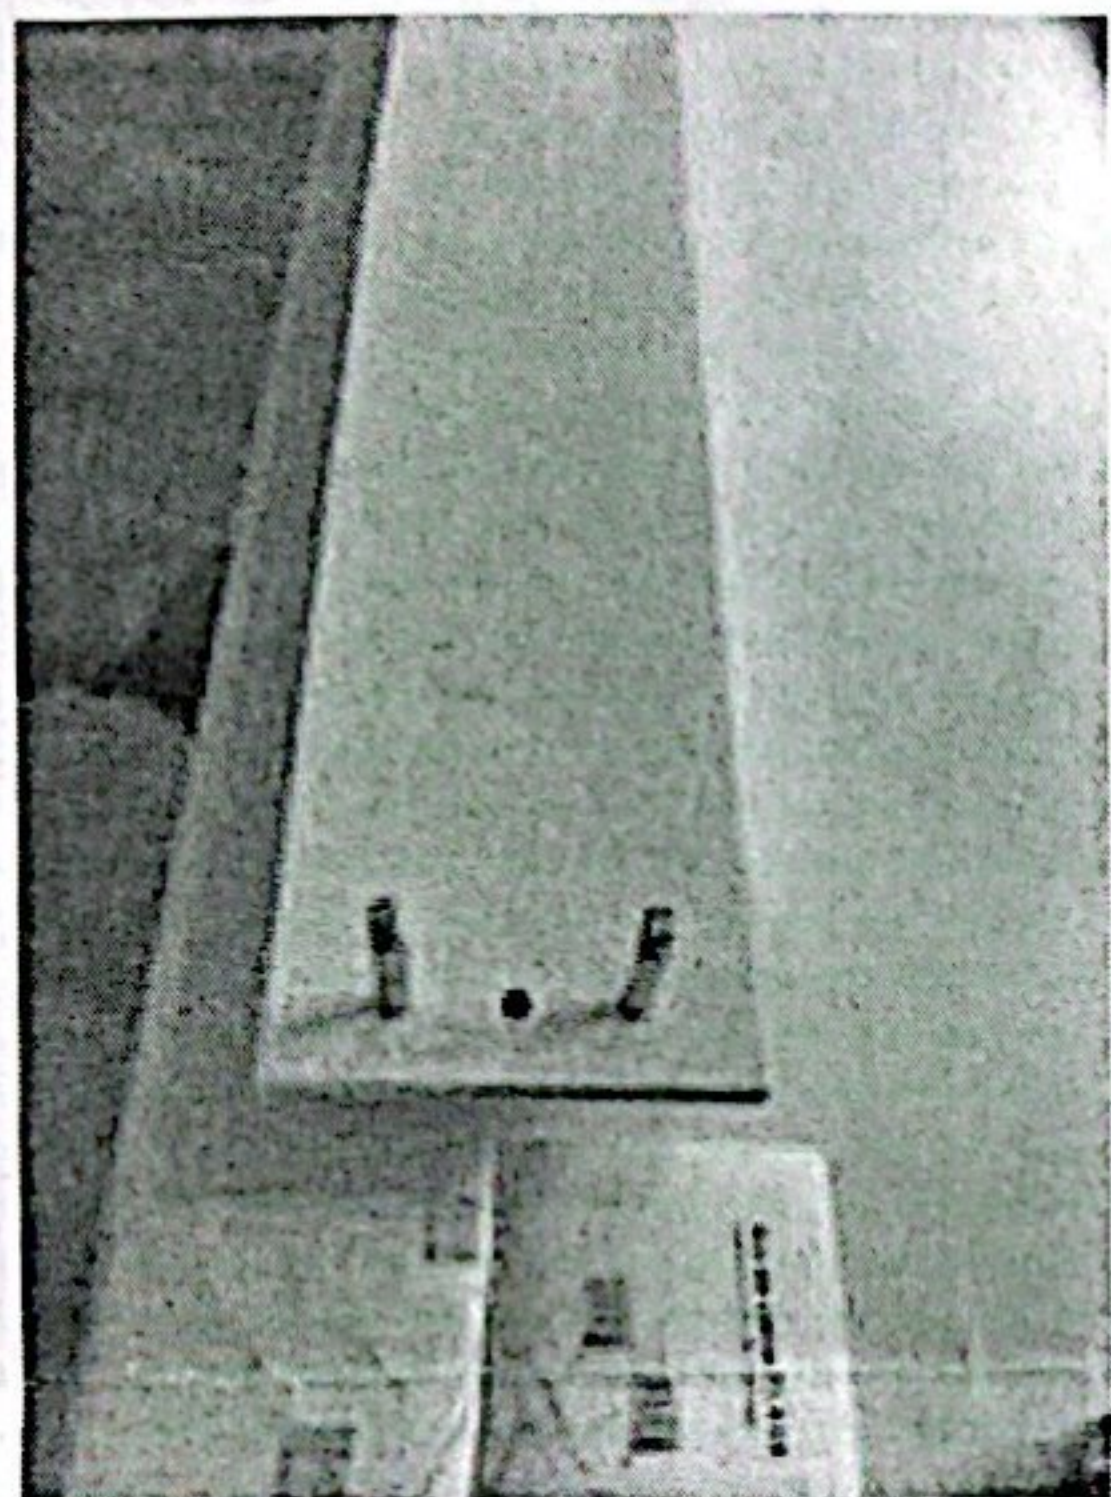



PLACE THE FITTINGS IN THE FOOT BOARD AND BOTH SIDERAILS

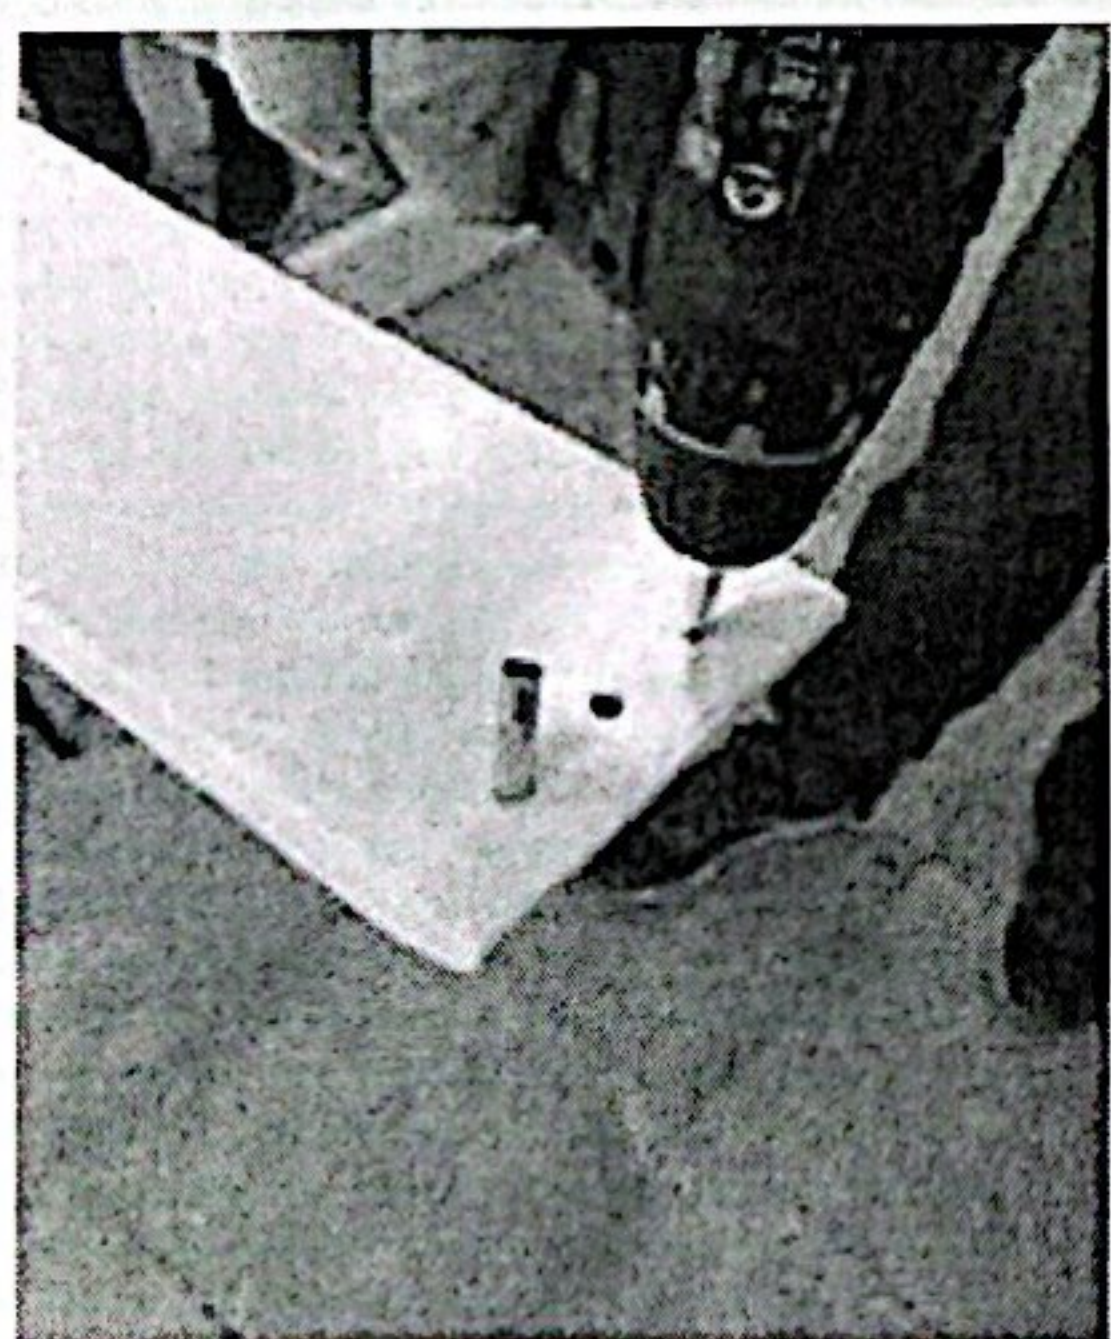

VERY IMPORTANT!!!!

PLACE THE FITTING WITH THE ARROW POINTING THE FOOTBOARD THAT HAS TO BE JOINT

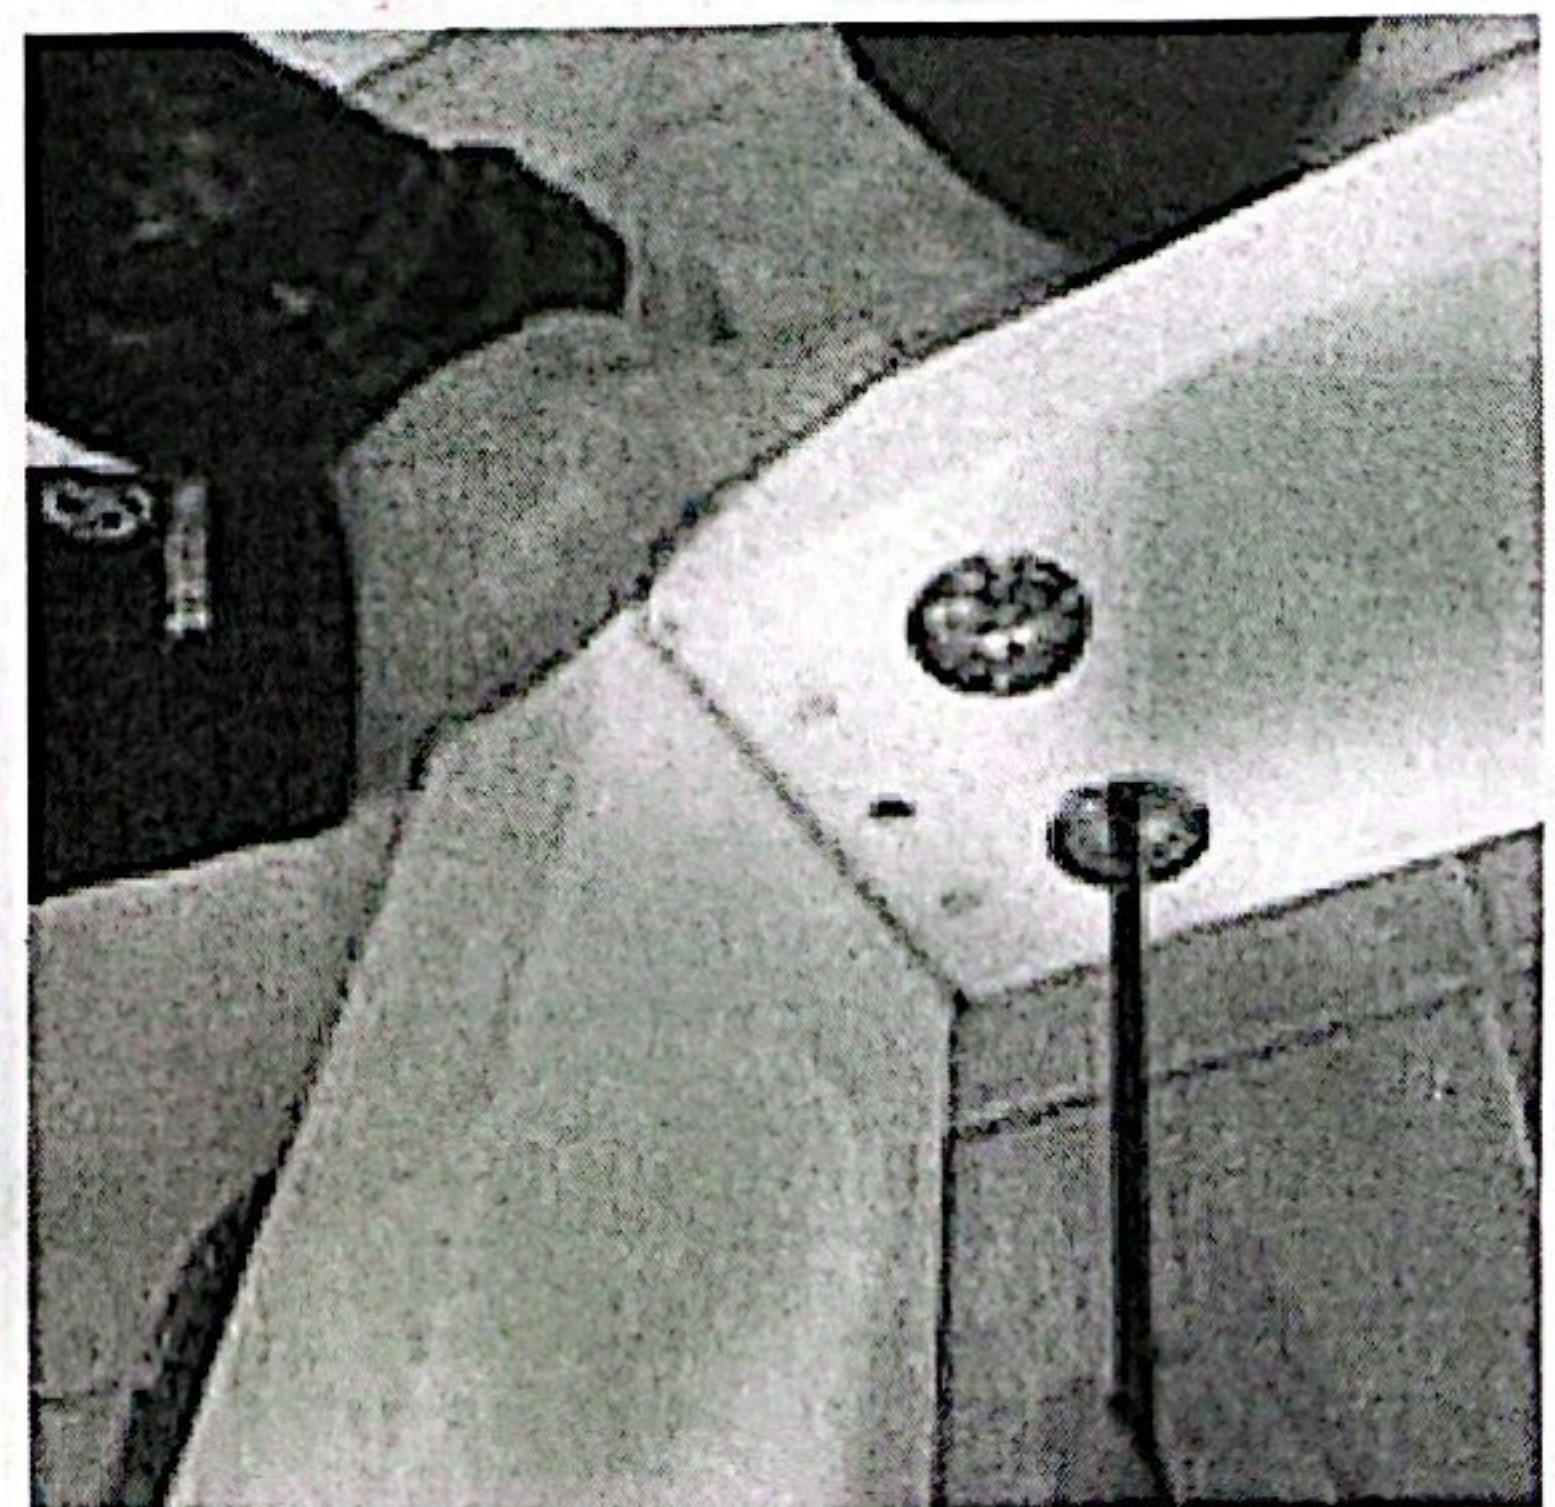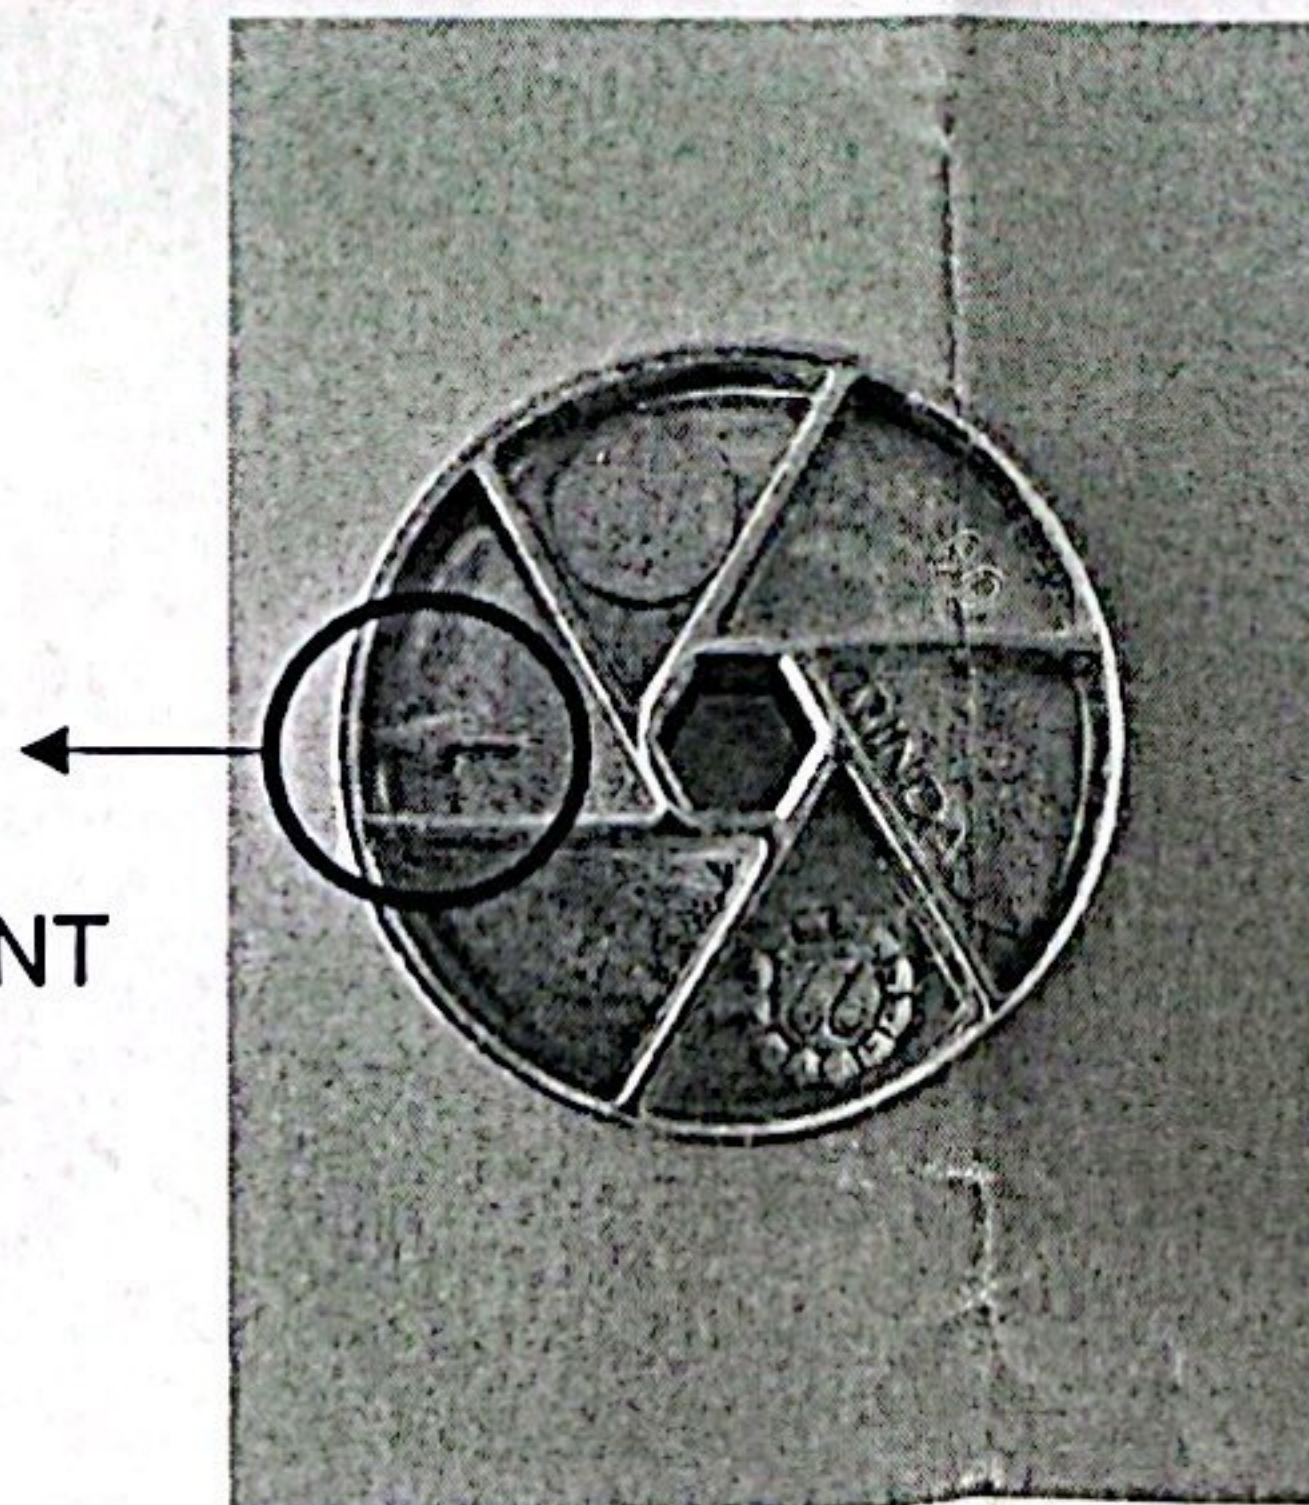


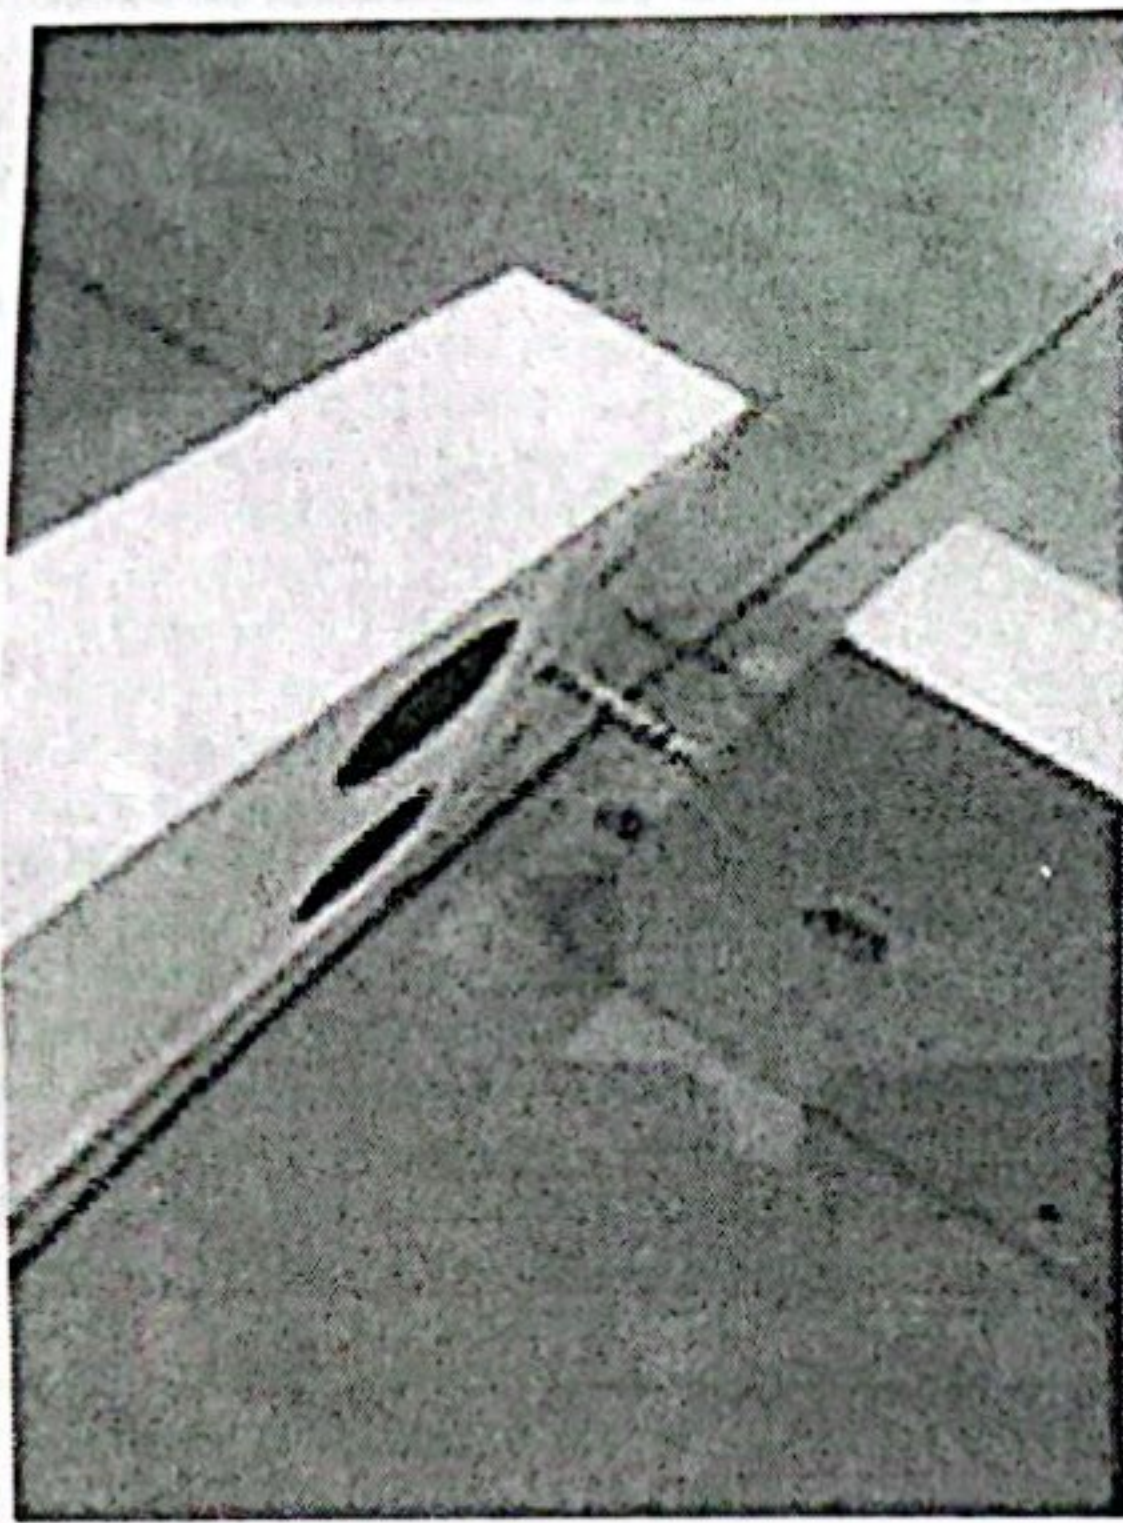

UNION BETWEEN SIDERAILS  
WITH INTERIOR FOOTBOARD



ASSEMBLY METALLIC CROSSBARS  
WITH SIDERAILS

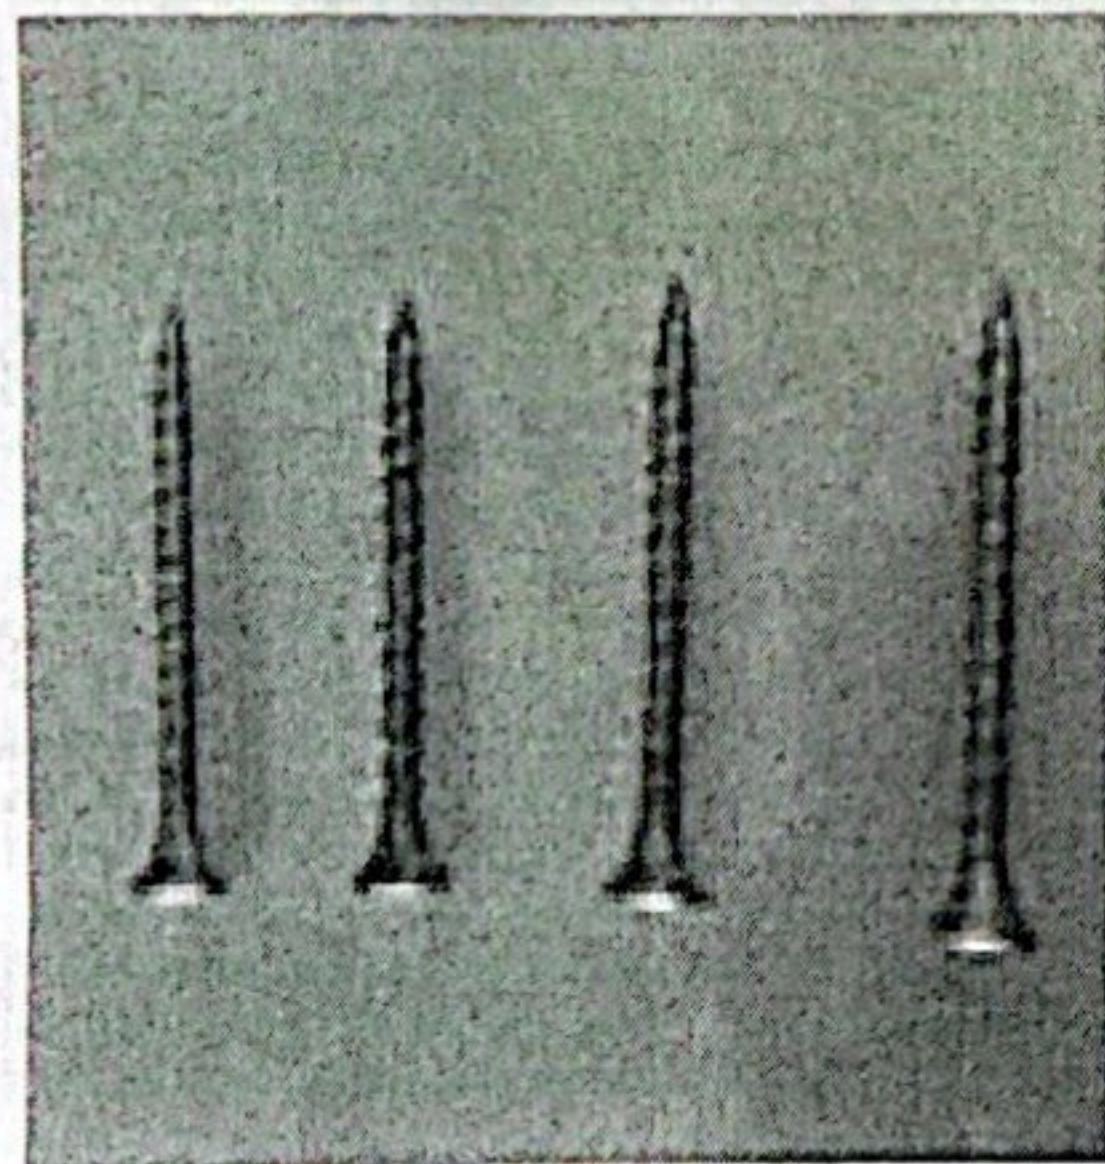

FINALLY SCREW THROUGH  
INTERIOR FOOTBOARD THE  
BEDFRAME TO THE  
HEADBOARD

